

CONTENTS	Page no.
A) OVERVIEW	
1. Features.....	1
2. Ordering information.....	2
B) SPECIFICATIONS	3
C) INSTALLATION	
1. Safety Information.....	7
2. Terminal connections.....	9
3. Sensor input wiring.....	10
4. Control output wiring.....	10
D) PROGRAMMING	
1. Function menu.....	13
2. Keys' description.....	15
3. Level 0-Input parameters.....	16
4. Level 1-Output parameters.....	18
5. Level 2-Auxiliary output modes.....	21
6. Level 3-Alarm 2 module.....	24
7. Level 4-Special functions.....	25
8. Level 6-Lockout module.....	28
E) USER GUIDE.....	32

A) OVERVIEW



1. SALIENT FEATURES

- ✓ Universal Input
17 user selectable types including signal inputs.
- ✓ Selectable lower display
User selectable lower display options enable quick setting of different parameters such as Set points, Alarms, PID values, Tuning etc.
- ✓ Zone PID
4 programmable control zones.
- ✓ Outputs
In signal output models output is selectable as control output or retransmission output.
- ✓ Special Modes
User selectable special modes
 - Heat-Cool PID
 - Auto/Manual

- Single point ramp/soak.
- Soft start.


OTHERS

- ✓ 1/16 DIN
- ✓ Dual 4 digit display
- ✓ Digital filtering
- ✓ Sensor break indication
- ✓ Sensor error compensation
- ✓ Programmable parameter lockouts
- ✓ 85 to 270 VAC supply
- ✓ Compliance-CE

OPTIONAL FEATURES

- ✓ Extra Alarm output
- ✓ Heater current monitoring
- ✓ Linear DC outputs
(0 to 10V, 0 to 5V, 0/4 to 20mA)
- ✓ Remote set-point input
- ✓ Motorised input
- ✓ RS-485 MODBUS communication
- ✓ 12VDC output to drive SSR.
- ✓ 24 VAC/DC supply voltage models


2. ORDERING CODE -

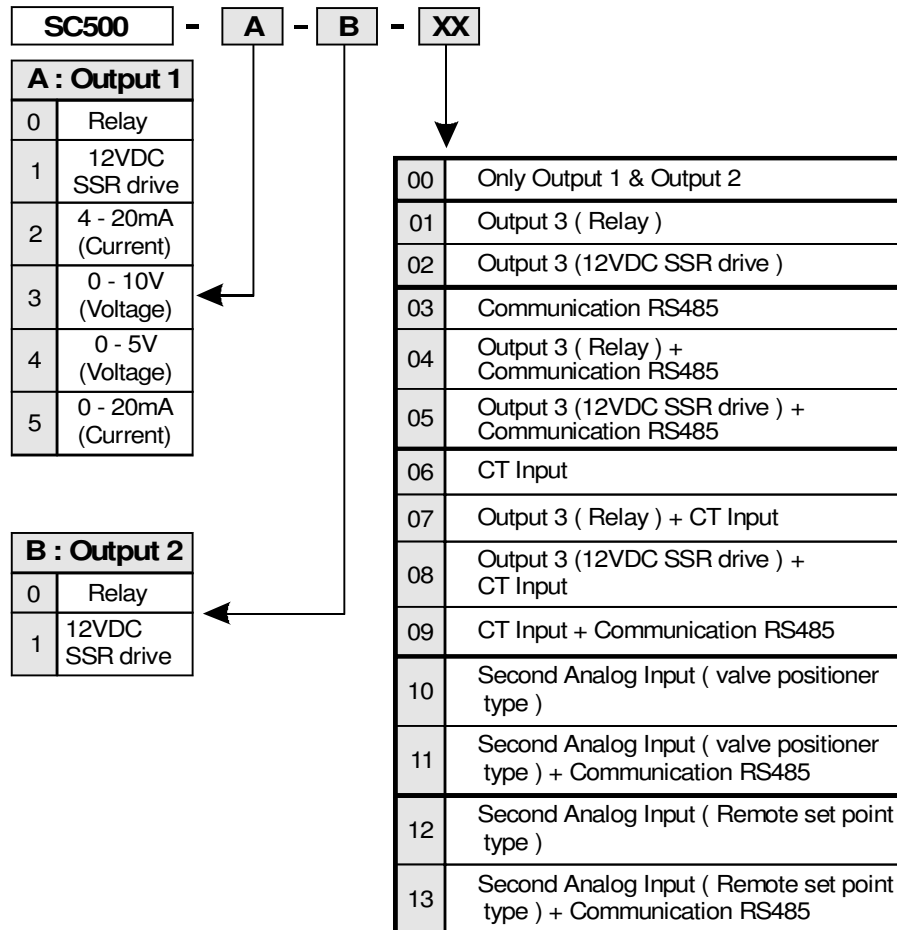

ORDERING EXAMPLE

Note: Input is user selectable.

Only output needs to be specified in the ordering code.

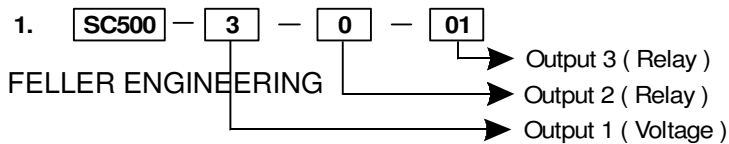

PID Temperature Controller

SC500

OPERATING INSTRUCTIONS

B) SPECIFICATIONS

1. TECHNICAL SPECIFICATIONS

1. DISPLAY

Display	Dual 4 digit 7- segment LED Upper display : 10mm high Red (process value) Lower display : 7mm high Green (selectable)
Led Status Annunciators	Main output (1). Alarm output (2, 3). Manual output (M). Tune (T).

2. INPUT

Input	Thermocouple: J,K,T,R,S,C,E,B,N,L,U,W,Platinel II RTD: PT100. Signal inputs: -5.00 to 56mV,0...10VDC, 0... 20mADC (Programmable scale type)
Sampling time	250ms
Resolution	1/0.1OC for TC/RTD 1/0.1/0.01/0.001 for Analog input.
Indication accuracy	+0.25% of span or 1OC whichever is greater. (20min of warmup time). Cold junction calibration accuracy in TC mode + 5oC.
Digital filtering	0 to 99 sec.

3. OUTPUT

3.1. Control Output

Relay contact output	Rating: 5A @250VAC or 30VDC
----------------------	-----------------------------

OPERATING INSTRUCTIONS

	Life expectancy: 100000 cycles at maximum load rating
SSR drive voltage output (optional)	12 VDC
Current output (Optional)	Range:0 / 4-20mADC Action: Control. Update rate: Cycle time. Maximum output load resistance: 500E.
Voltage output (Optional)	Range: 0-5 / 10VDC Action: Control Update rate: Cycle time Minimum output load resistance: 10K.

OPERATING INSTRUCTIONS

3.2. Alarm Output

Relay contact output (Relay 2, Relay 3(optional))	Rating: 5A @250VAC or 30VDC Life expectancy: 100000 cycles at maximum load rating
--	--

3.3. Retransmission output (optional)

Current output	Range: 0 / 4-20mA Action: Retransmission. Update rate: 100msec Maximum output load resistance: 500E.
Voltage output	Range: 0-5 / 10V Action: Retransmission. Update rate: 100msec Minimum output load resistance: 10K.

4. FUNCTION

Main control	Control: PID or ON/OFF Output: Time proportioning or Linear DC Cycle time: 0.1 to 100.0sec Auto tune Programmable % output.
Zone PID	4 programmable control zones.
Heat-cool PID mode	Control: PID or ON/OFF Output: Time proportioning. Cycle time: 0.1 to 100.0sec. Proportional gain: 0 to 400oC. Heat/Cool dead band overlap: Programmable.
Alarms	Modes: Deviation high, Deviation low, Band, Full scale high, Full scale low, Sensor break. Operation: Absolute or Deviation mode. Hysteresis: Programmable.

OPERATING INSTRUCTIONS

	Hold/Standby mode: Programmable. Annunciator: Programmable. Reset action: Programmable - Automatic or latched. Probe break action: Upscale.
--	--

5. OPTIONAL

5.1. Remote set point input

Input type	0...20mA / 0...10V
Input Resistance	100 ohms.
Over range	-5%...105%
Scale range	-1999...9999 with fixed 10C for TC/RTD and as per resolution selected for Analog input.

5.2. Heater current monitor input

Type	Single phase, full wave monitoring of load currents controlled by main output.
Input	100mA AC output from current transformer.
Display scale range	0...999.9A
Input resistance	47 ohms
Accuracy	+0.5% of full scale + 1 digit
Frequency	50...400Hz
Alarm mode	LA / HA / BAND
Over range	105% Capacity
Over load	150mA (continuous)

5.3. Serial communication

Interface standard	RS 485.
Communication address	1 99, maximum of 32 units per line.
Transmission mode	Half duplex.
Transmission protocol	MODBUS RTU.
Transmission distance	500 m maximum.
Transmission speed	9600, 4800, 2400, 1200, 600, 300 bits/sec.
Parity	None, Odd, Even, Mark, Space.
Stop bits	1 or 2
Response time	100ms (max and independent of baud rate).

6. ENVIRONMENTAL CONDITIONS

Operating range	0 50°C
Storage range	-20 75°C.
Storage humidity	85% max. RH (non condensing) from 0 to 50°C

7. POWER SUPPLY

Power supply	85 270VAC/DC. (Optional 24VAC/DC)
Frequency	50/60Hz.
Power consumption	5 VA max.

8. ISOLATION BREAKDOWN RATINGS.

AC line w.r.t. all inputs and outputs	2000 volts.
All other inputs and outputs w.r.t. Relay contacts	2000 VAC.

9. SAFETY AND EMC STANDARDS.

Compliance	CE.
LVD	As per BS EN 61010.
EMC	As per BS EN 61326.
Panel sealing	IP66.

10. WEIGHT : 195 gms.

11. HOUSING : Flame retardant engineering plastic.


12. INPUT SENSOR RANGES (for 1°C resolution):

Sensor type	Range	Sensor type	Range
J	-200 to 750 °C	E	-200 to 750 °C
K	-200 to 1350 °C	B	+149 to 1820 °C
T	-200 to 400 °C	N	-200 to 1300 °C
R	0 to 1750 °C	L	-200 to 900 °C
S	0 to 1750 °C	U	-200 to 400 °C
C	0 to 2300 °C	W	0 to 2300 °C
Platinel II	0 to 1390 °C	PT100	-100 to 850 °C

Signal inputs

Input type	Range
Linear mV	-5 to 56mV
Voltage	0 to 10VDC
Current	0 to 20mA

13. INPUT SELECTION JUMPER ASSIGNMENTS:

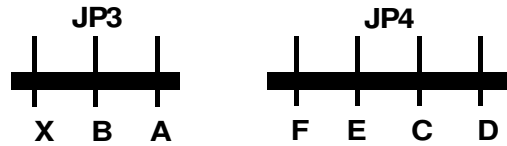

Short respective pins of JP3 & JP4 as per the table given below for hardware selection of input sensor types:

Input type	JP3	JP4
TC / RTD / LIN (mV)	(XB)	(FE)
0 - 10V	(XB)	(EC)
4 - 20 mA	(BA)	(CD)

NOTE : Sensor selection to be done in Level 0 of programming also.

C) INSTALLATION

1. SAFETY INFORMATION

SAFETY SUMMARY

This manual is meant for the personnel involved in wiring, installation, operation, and routine maintenance of the equipment. All safety related codifications; symbols and instructions that appear in this operating manual or on the equipment must be strictly followed to ensure the safety of the operating personnel as well as the instrument.

If the equipment is not handled in a manner specified by the manufacturer it might impair the protection provided by the equipment.

CAUTION: Read complete instructions prior to installation and

operation of the unit.

CAUTION: Risk of electric shock.

INSTALLATION INSTRUCTIONS

CAUTION:

- 1.This equipment, being built-in-type, normally becomes a part of the main control panel and in such case the terminals do not remain accessible to the end user after installation and internal wiring.
- 2.Conductors must not come in contact with the internal circuitry of the equipment or else it may lead to a safety hazard that may in turn endanger life or cause electrical shock to the operator.
- 3.Circuit breaker or mains switch must be installed between power source and supply terminals to facilitate power 'ON' or 'OFF' function. However this switch or breaker must be installed in a convenient position normally accessible to an operator.

CAUTION:

- 1.The equipment shall not be installed in environmental conditions other than those specified in this manual.
- 2.Fuse Protection - The equipment does not contain built-in fuse. Installation of external fuse for electrical circuitry is highly recommended. Recommended rating of such fuse shall be 275VAC/1Amp.
- 3.Since this is a built-in type equipment (finds place in main control panel), its output terminals get connected to host equipment. Such equipment shall also comply with basic EMI/EMC and safety requirements like BS EN 61326-1 and BS EN 61010 respectively.
- 4.Thermal dissipation of equipment is met through ventilation holes provided on chassis of equipment. Such ventilation holes shall not be obstructed else it can lead to a safety hazard.
- 5.The output terminals shall be strictly loaded to the manufacturer specified values/range.

WIRING INSTRUCTIONS

CAUTION:

- 1.To prevent the risk of electric shock power supply to the equipment must be kept OFF while doing the wiring arrangement.
- 2.Terminals and electrically charged parts must not be touched when the power is ON.

3. Wiring shall be done strictly according to the terminal layout with shortest connections. Confirm that all connections are correct.
4. Use lugged terminals to meet M3.5 screws.
5. To eliminate electromagnetic interference use of short wire with adequate ratings and twists of the same in equal size shall be made.
6. Cable used for connection to power source, must have a cross section of 1 or greater. These wires shall have insulation capacity made of at least 1.5KV.

ELECTRICAL PRECAUTIONS DURING USE

Electrical noise generated by switching of inductive loads can create momentary disruption, erratic display, latch up, data loss or permanent damage to the instrument. To reduce noise:


- A) Use of MOV across supply of temperature controller & snubber circuits across loads are recommended. Part numbers are as follows:
 1. MOV: AP-MOV-03
 2. Snubber: APRC-01.
- B) Use separate shielded wires for inputs.

INSTALLATION GUIDELINES

Mechanical Installation:

For installing the controller

1. Prepare the panel cutout with proper dimensions as shown.

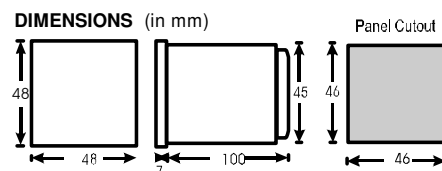

2. Remove the clamp from the controller.

3. Push the controller into the panel cutout. Secure the controller in its clamp from the rear side.

place by pushing the

CAUTION:

The equipment in its installed state must not come in close proximity to any vapors, oils, steam, or other unwanted process by-products.

heating sources, caustic

EMC Guidelines:


1. Use proper input power cables with shortest connections and twisted type.
2. Layout of connecting cables shall be away from any internal EMI source.

MAINTENANCE

1. The equipment should be cleaned regularly to avoid blockage of ventilating
2. Use soft cloth soaked in water for cleaning. Do not use any other cleaning
3. Care must be taken to prevent the water from entering into the electronic ventilating holes.

parts.
agent.
circuitry through the


2. TERMINAL CONNECTIONS

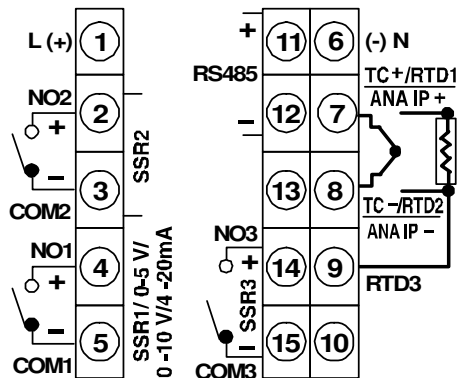

TERMINAL DESCRIPTIONS

1	LIVE (SUPPLY)
2	NO of relay 2
3	COM of relay 2
4	NO of relay 1
5	COM of relay 1
6	NEUTRAL (SUPPLY)
7	Positive of thermocouple or RTD1 (PT100) or Analog input +ve
8	Negative of thermocouple or RTD2 (PT100) or Analog input -ve
9	3rd wire of RTD (PT100)
11	Positive of RS485
12	Negative of RS485
14	NO of relay 3
15	COM of relay 3

3. SENSOR INPUT WIRING

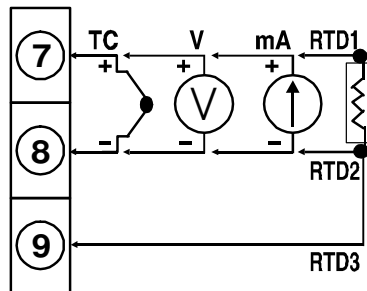

TC - Thermocouple (J, K, T, R, S, C, E, B, N, L, U, W, Platinel II).

V - Voltage Input (0 to 10 V DC).

mA - Current Input (0 to 20mA DC)

RTD - PT100.

- NOTE :
- 1) Refer input type selection in level 0.
 - 2) Refer input jumper selection as in point no. 13 on page 6.
 - 3) For 2 wire RTD short terminals 8 & 9 .

4. CONTROL OUTPUT WIRING

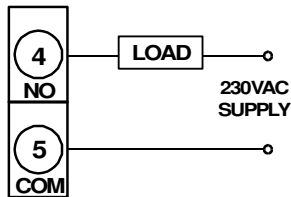


Fig1. Output 1 - Relay to drive load (resistive load less than 1A).

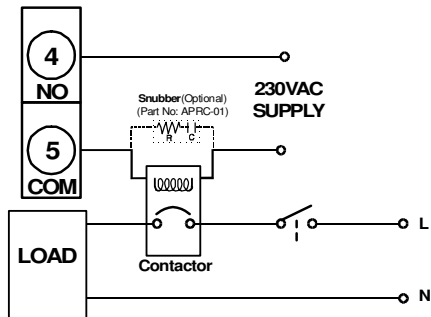


Fig2. Output 1 - Relay / SSR to drive contactor (For single phase).

NOTE: Use snubber as shown above to increase life of internal relay of temperature controller.

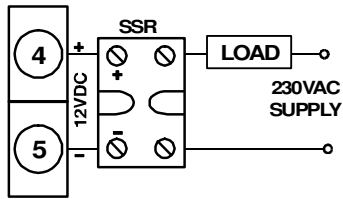


Fig3. Output 1 - Pulsed voltage to drive SSR.

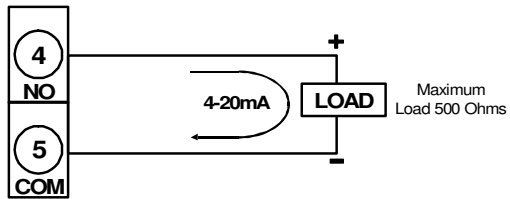


Fig4. Output 1 - Linear current.

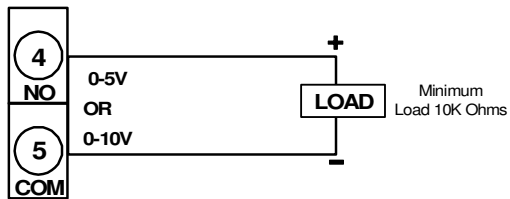


Fig5. Output 1 - Linear voltage.


NOTE:

For output 2 and output 3:

- 1) Configuration is same.
- 2) Terminal nos - Output 2 : 2 - 3.
Output 3 : 14 - 15.

D PROGRAMMING

Listenpreis: € 2.082,00

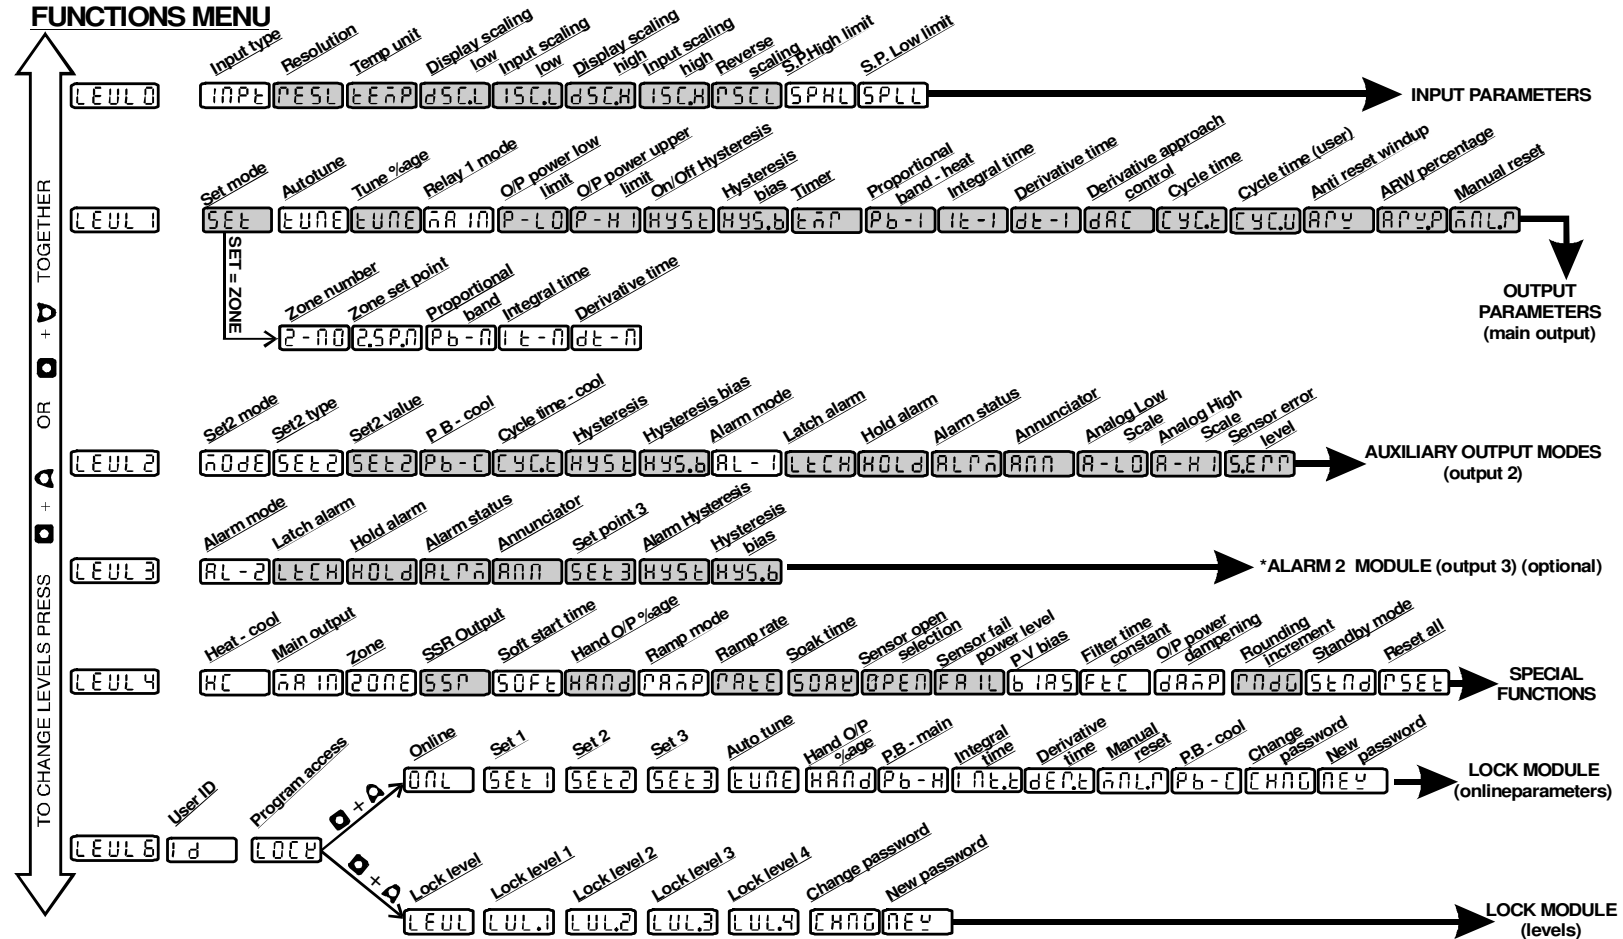


PID Temperature Controller

SC500

OPERATING INSTRUCTIONS

OPERATING INSTRUCTIONS

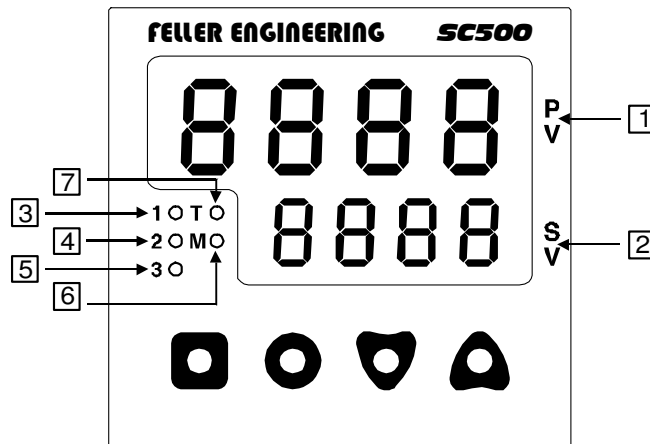

KEYS DESCRIPTION

Functions	Key press
To enter or exit program mode	+ together for 3 seconds
To change levels	or till Level is displayed. + / to increase or decrease the level number.
To view function on the same level and to display the current option.	or key once to view the next/previous function.
To increase or decrease the value of a particular function.	+ to increase and + to decrease the function value.
To view and change parameters online	key to view the parameter and + / to scroll through the parameters. Press + / to change parameter value.

NOTE: The unit will autoexit program mode after 60 seconds of inactivity.

INDICATIONS AND DISPLAY

1. Process-value (PV)	Display the process temperature value.
2. Set-value (SV)	Displays the value of the lower display option selected. By default display is set1 value.
3. Relay 1 (1)	Indicates the status of Main output (relay 1).
4. Relay 2 (2)	Indicates the status of Alarm output (relay 2).
5. Relay 3 (3)	Indicates the status of Alarm output (relay 3).
6. M	Indication for Fixed Manual output.
7. T	Indication for Tuning in progress.

OPERATING INSTRUCTIONS

PROGRAMMING OF LEVELS

Level 0**Input parameters**

Display	Name & Description	Range	Display condition	Default value
INPT	<u>Input type</u> Select input type as – Thermocouples: J,K,T,R,S,C,E,B,N,L,U,W. Platinel. RTD: Pt100 Signal Inputs: Linear mV (-5 to 56mV), Voltage (0 to 10VDC), Current (4 to 20mADC).	J/K/T/R/S/C/E/ B/N/L/V/W/PtnL/ P100/Mv/10V/ 20mA		J
rESL	<u>Resolution</u>	1/0.1 for TC/RTD 1/0.1/0.01/0.001 for Analog input.	Not prompted for R, S, and B type thermocouple.	1
tEMP	<u>Temperature unit</u>	°C/°F	Prompted only for TC/RTD inputs.	°C
dSC.L	<u>Display value scaling point1</u> Feed the value of the display required at the low value of analog input.	-1999 to DPSH (display as per resolution selected for analog input)	Valid only for analog input.	0
ISC.L	<u>Input value scaling point1</u> Feed the lower value of the analog input signal.	0.0mA/-5.0mV/0.0V to IPSH	Valid only for analog input.	0.00
dSC.H	<u>Display value scaling point2</u> Feed the value of display required at the high value of analog input.	DPSL to 9999 (display as per resolution selected for analog input)	Valid for analog input.	9999
ISC.H	<u>Input value scaling point2</u> Feed the higher value of the analog input signal.	IPSL to 20.00mA/56mV/ 10.00V	Valid for analog input.	20.00
rSC.L	<u>Reverse scaling</u> Display scaling points can be reversed.	nO/YES	Valid for analog input.	nO
SPHL	<u>Set point high limit</u>	SPLL to maximum sensor range value (1°C resolution for		750

OPERATING INSTRUCTIONS

		TC/RTD).SPLL to 9999 as per resolution for analog input.	
SPLL	<u>Set point low limit</u>	Minimum range of sensor to SPHL with 1°C resolution for TC/RTD; -1999 to SPHL as per resolution selected for analog input.	-200

Note: 1. Whenever resolution is changed from 1 to 0.1 SPLL and SPHL is limited to

-199 and 999 respectively.

2. #1 - Display is with fixed 1°C resolution for TC/RTD and as per resolution selected for analog input.

PARAMETER EXPLANATIONS :

TEMPERATURE UNIT:

The temperature unit is selectable between OC and OF. When temperature unit is changed, the temperature ranges will also be changed according to the present selection of unit. If changed, be sure to check all parameters.

RESOLUTION:


The resolution is selectable between 1 and 0.1 for TC and RTD inputs whereas it is selectable between 1, 0.1, 0.01,0.001 for analog inputs. If changed, be sure to check all parameters.

PARAMETER EXPLANATIONS : (contd...)

SCALING FOR ANALOG INPUT:

To scale the controller, two scaling points are necessary. Each scaling point has a coordinate pair of Display Values and Input Values. It is recommended that the two scaling points be at the low and high ends of the input signal being measured. Process value scaling will be linear between and continue past the entered points to the limits of the input range. (Factory settings example will display 0.0 at 0 mA input and display 9999 at 20.00 mA input.)

OPERATING INSTRUCTIONS

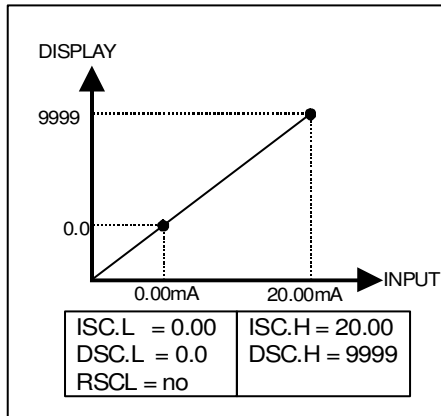

OPERATING INSTRUCTIONS

Reverse acting indication can be accomplished by setting reverse scaling parameter as YES. In this case the parameter values will be as follows:

ISC.L = 0.00	ISC.H = 20.00
DSC.L = 9999	DSC.H = 0.0
RSCL = yes	

SET POINT LIMIT VALUES:

The controller has programmable high and low set point limit values to restrict the setting range of the set point. Set the limit values so that the temperature set point value cannot be set outside the safe operating area of the process.

Level 1**Output parameters**

Display	Name & Description	Range	Display condition	Default value
Set	Set mode	All / Zone	Zone PID = yes in level 4.	ALL

Display	Name & Description	Range	Display condition	Default value
tUNE	<u>Auto tune</u>	OFF/ON	PID control	OFF
tUNE	<u>Tune percentage</u>	P.Au, 75 to 100	Tune = ON	p.au
MAIn	<u>Main Output mode</u>	rE/ Fd	Heat-cool = No	rE
P-LO	<u>Output power lower limit</u>	0% to output power upper limit; -100% to output power upper limit (in heat-cool mode)	PID control	0
P-HI	<u>Output power upper limit</u>	Output power low limit to 100%; -100% to output power upper limit (in heat-cool mode)	PID control	100
HYST	<u>ON-OFF control Hysteresis</u>	0.1 to 99.9	ON-OFF control (Pb-N=0)	1.0
HYS.b	<u>Hysteresis bias</u>	-9.9 to 9.9 (for TC/RTD); -99 to 99 as per	ON-OFF control (Pb-n = 0)	0.0

OPERATING INSTRUCTIONS

		resolution for analog input.		
tMr	<u>Timer</u>	0.0 to 99.9 minutes	Main relay = Fd and control is ON-OFF.	0
Pb-1	<u>Proportional band- heat</u>	0 to 400.0°C	--	10.0
It – 1	<u>Integral time</u>	0.0 to 3600 sec.	--	120
Dt – 1	<u>Derivative time</u>	0 to 200 sec.	--	30
dAC	<u>Derivative approach control</u>	0.5 to 5.0X band.	--	1.0
CYC.t	<u>Cycle time</u>	USEr/USr.F/A15 .0	--	USEr
CYC.U	<u>Cycle time-user</u>	0.1 to 100.0 sec	Cycle time = USEr	15.0
ARW	<u>Anti-reset windup</u>	AUtO/ MAnL	--	AUtO
ARW.P	<u>Anti-reset windup %</u>	20.0 to 200.0%	ARW = MAnL	50
MnL.r	<u>Manual Reset*</u>	-99.9 to 99.9 (for 0.1°C resolution) -99 to 99°C (for 1°C) -999 to 999 (for analog input)	Pb-1>0 & It-1=0)	0

If Set Mode = All and Zone PID = YES, The parameters except the shaded ones will be prompted.

If Set Mode = Zone and Zone PID = YES, the following parameters will be prompted.

Zone

Display	Name & Description	Range	Display condition	Default value
Z-NO	Zone number	1 to 4	Zone PID = YES (in level4)	1
Z.SP.n	Zone set point	SPLL TO SPHL		0
Pb – n*	Proportional band	0 to 400.0 °C		10
It – n*	Intergal time	0 to 3600 sec	Pb – n > 0	120
Dt – n*	Derivative time	0 to 200 sec	Pb – n > 0	30

For Proportional band, Integral time, Derivative time n = 1 to 4.

PARAMETER EXPLANATIONS :

AUTO TUNING:

OPERATING INSTRUCTIONS

Auto tuning is a function whereby the controller learns the process characteristics by itself and automatically sets the required P,I and D values. The new P,I,D parameters will be stored in non-volatile memory automatically. TUNE ON is indicated by a blinking decimal point in the upper display.(for detailed explanations of PID parameters refer USER GUIDE).

OUTPUT POWER LIMITS:

These parameters are used to limit the minimum and maximum controller output power. The output power lower limit will ensure that a minimum percentage of output (as per requirement) is available in case any process disturbances or setpoint changes occur. The output power high limit ensures that in case any process disturbance or set point changes occur, the maximum value of output is limited to a value as per requirement.

TIMER:

TIMER is main output restart time. In this main output once turned OFF will turn ON only after set time even if the temperature has increased and is more than the set temperature. This is needed to prevent the compressor from restarting in a short time(less than the set time).

CYCLE TIME:

USER: User can program the cycle time. The value will be altered when put to autotune. Ustr.F: User can fix the cycle time. This has the highest priority. AutoO: This is recommended. The cycle time value is calculated automatically during autotune.

ANTIRESET WINDUP:

The anti-reset windup (ARW) inhibits the integral action until the PV is within the proportional band thus reducing overshoot on start-up. If the selection is -
1. AutoO: The value will be calculated automatically during autotune (Recommended). 2. ManL: The value can be fed manually by the user.

Level 2**Output Parameters**

Display	Name & Description	Range	Display condition	Default value
ModE	<u>Set 2 Mode*</u>	AlrM / none / Fd / rEV	Not for Heat-cool	ALrM
SEt2	<u>Set 2 Type</u>	AbS/dEV	Set2 mode=Fd/rEV.	AbS
SEt2	<u>Set 2 Value</u>	SPLL to SPHL	PID control	0
Pb-C	<u>Proportional band-Cool</u>	0 to 400C	Heat-cool mode	10
CYC.t	<u>Cycle time-Cool</u>	0.1 to 100.0sec	Pb-C>0	15
HYST	<u>Hysteresis</u>	0.1 to 99.9°C	Set2 mode=Fd/rEV/ALrM(not sensor break); Heat-cool(Pb-C=0)	1.0

OPERATING INSTRUCTIONS

HYS.b	<u>Hysteresis bias</u>	-9.9 to 9.9°C (for TC/RTD); -99 to 99 as per resolution for analog input.	Set2 mode=Fd/rEV/ALrM(not sensor break); Heat-cool(Pb-C=0)	0.0
AL-1	<u>Alarm1 mode</u>	OFF/dVHI/dVLO /bAnd/FSHI/FSL O/brK.	Set2 mode=ALrM	DVHI
LtCH	<u>Alarm latch</u>	OFF/On	These parameters are not prompted if Alarm 1 mode is OFF	OFF
HOLd	<u>Hold Alarm</u>	OFF/On		OFF
AlrM	<u>Relay status for Alarm1</u>	En/dEn		En
Ann	<u>Alarm Annunciator</u>	OFF/On		OFF
A-LO	<u>Analog low scaling</u>	-1999 to 9999	For Analog output if Main output=Relay2	0
A-HI	<u>Analog high scaling</u>	-1999 to 9999	For Analog output if Main output=Relay2	9999
S.Err	<u>Sensor error level</u> In case of sensor failure the output can be set to high or low value of range.	HIGH / LOW	For analog output if Main output = Relay 2.	HIGH

NOTE : If set 2 mode = none, no other parameters will be prompted.

NOTE:

In HC mode only the following parameter will be prompted :-

1. Set 2 value - this parameter will be prompted as db (dead band)
2. Proportional band - cool (Pb-C)
3. Cycle time - cool (cyc.t)

In case of analog retransmission only the following parameters will be prompted:

1. A-LO : Analog low scaling.
2. A-HI : Analog high scaling.
3. S.ERR : Sensor error level.

Display is with fixed 1°C resolution for TC/RTD and as per resolution selected for analog input.

PARAMETER EXPLANATIONS :

SET 2 MODE:

AlrM: Set2 can be programmed as alarm.

NonE: If set2 is not required it can be programmed as none.

Fd: Set2 programmed in cooling mode.(output ON when above the setpoint).

OPERATING INSTRUCTIONS

rE: Set2 programmed in heating mode.(output ON when below the setpoint)

SET 2 TYPE:



AbS: Absolute alarm is a self-existent alarm independent of the main set point.

DEV: The alarm is activated at an error on the main set point.

ALARM MODES:

(Refer USER GUIDE for detailed explanation).

ALARM LATCH:

When Latch is ON, the alarm once activated remains activated even when the error is removed. To deactivate the alarm, it has to be acknowledged by selecting AL-NO from the front online options and pressing  +  .

HOLD ALARM:

When HOLD is ON, in any alarm mode, it prevents an alarm signal on power-up. The alarm is enabled only if the process temperature is within the alarm range.

ALARM ANNUNCIATOR:

When alarm annunciator is ON, during alarm condition, visual annunciation is given by the upper display altering between AL-NO and process temperature where NO is the alarm number. The annunciator may be disabled by selecting function ANN as OFF.

Level 3 Alarm 2 Module

Display	Name & Description	Range	Display condition	Default value
AL-2	<u>Alarm 2 Mode</u>	OFF / dVHI / dVLO / band / FSHI / FSLO / S.brk.	Alarm 2 should be available.	DVHI
LtCH	<u>Alarm latch</u>	OFF/On	These parameters are not prompted if alarms 2 mode is OFF.	OFF
HOLd	<u>Hold Alarm</u>	OFF/On		OFF
AlrM	<u>Relay atatus for Alarm1</u>	En/dEn		En
Ann	<u>Alarm Annunciator</u>	OFF/On		OFF
SEt3	<u>Set point 3</u>	SPLL to SPHL	These parameters are not prompted if alarms 2 mode is OFF / Brk	0
HYSst	<u>Alarm Hysteresis</u>	0.1 to 99.9C for TC/RTD;1 to 99C for analog input.		0.1
HYS.b	<u>Hysteresis bias</u>	-9.9 to 9.9C for TC/RTD;-99 to	Set2 mode = Fd / rev / Alrm (not	0

OPERATING INSTRUCTIONS

		99 for analog input.	sensor brk); heatcool (Pb – C = 0)	
--	--	----------------------	------------------------------------	--

PARAMETER EXPLANATIONS:

For parameter explanations refer level 2.

Level 4**Special functions**

Display	Name & Description	Range	Display condition	Default value
HC	Heat-cool mode The controller can be operated in heat-cool mode if this selection is YES.	NO / YES	--	NO
ZONE	Zone PID	NO / YES	--	NO
MAIN	Main Output	Rly1 / AOuT / Rly2	--	Rly1 / AOuT
SSR	SSR Output	NO / YES	SSR Output model	NO
SOFT	Soft start time	OFF / 000 to 999 min	PID control	OFF
HANd	Hand output percentage	OFF, o/p power low limit to o/p power high limit.	PID control	OFF
Ramp	Ramp mode	OFF / HOLD / ON	--	OFF
Rate	Ramp rate	0001 to 9999 degree / hr	Ramp mode = ON / HOLD	100
SOAK	Soak time	0 to 1440 min	Ramp mode = ON / HOLD	0
OPEN	Sensor open condition	AUTO / MANL	PID control	AUTO
FAIL	Sensor fail power level	0 to 100 %; -100 to 100 % in case of heat-cool mode.	Sensor open condition = MANL	0
Bias	PV bias	-99 to 99	--	0
FTC	Filter time constant	OFF, 1 to 99 sec	--	1
Damp	Output power dampening	OFF, 1 to 99 sec	Analog output model	1
RNdG	Rounding increment	0.1 to 10.0 for TC / RTD. Display as per	TC / RTD with resolution = 1°C or Analog input	0.1

OPERATING INSTRUCTIONS

		resolution for analog input		
StND	Standby mode	No / yes	--	No
RSEt	Reset all	No / yes	--	No

PARAMETER EXPLANATIONS :

MAIN OUTPUT:

The main output is selectable between relay1 and relay2 in case of relay output models. For analog retransmission the main output will be Aout and retransmission output will be relay2.

SOFT START TIME:

Soft start time can be programmed in situations where full output is not required at power ON. The time duration for the output to rise from 0% to 100% is programmed as soft start time.

HAND OUTPUT PERCENTAGE:

This parameter can be used when a fixed percentage of output (Analog output) is desired. For example: If 4-20mA analog output is being used and the desired output is 12mA, the hand percentage can be programmed as 50%. This will ensure that the analog output available is fixed 12mA i.e. 50%. This parameter is valid only for analog output models.

RAMP - SOAK:

The setpoint ramp feature can reduce thermal shock to the process, reduce temperature overshoot on start-up or set point changes, or ramp the process at a controlled rate. The soak feature can be used to hold the process at a preset temperature for a preset time.

Ramp modes:

Ramp OFF: Controller will be simple PID/ ON-OFF controller with P, I, D settings/hysteresis setting by user or default.

Ramp HOLD: suspends the ramp at the last value.

Ramp ON: Tunes the instrument for particular process. Ramp rate and soak time settings by the user or default.

SENSOR OPEN CONDITION:

The sensor open condition is selectable between Auto and Manual. If the sensor open condition is set to Auto, then all the relays remain off at over range or TC reverse condition. If the selection is Manual then the sensor fail power level can be programmed as per requirement.

PV BIAS: (DISPLAY OFFSET)

OPERATING INSTRUCTIONS

This function is used to adjust the PV value in cases where it is necessary for PV value to agree with another recorder or indicator, or when the sensor cannot be mounted in correct location.

FILTER TIME CONSTANT:

The filter is an adaptive digital filter that discriminates between measurement noise and actual process changes. If the input signal is increasing too greatly due to measurement noise, increase the filter value. If accurate control is desired, increase the filter time constant whereas if the fastest controller response is required, decrease the filter time constant.

ROUNDING INCREMENT:

This feature can be used if the process is inherently jittery to round off the display to a higher value than "1". Rounding selections other than 1 cause the process value to round to the nearest rounding increment selected. For example, a rounding increment value of 5 causes 122 to round to 120 and 123 to round to 125. This parameter is not applicable when the resolution is 0.1 (for TC/RTD). Set point values, Set point limits, Alarm values, Input Scaling values, and Analog Scaling values are not affected by rounding. The rounding increment is for controller's display only and does not affect (improve or degrade) the control accuracy of the unit.

STANDBY MODE:

This feature is useful during machine wiring. If standby mode is selected as YES, the following conditions exist:

- a. All displays are OFF.
- b. All outputs are OFF i.e. R1, R2, R3 LEDs are OFF.
- c. MNL LED is ON.
- d. Analog output is limited to the lower range.
- e. All front keys are disabled.
- f. Access to configuration enabled.

The STND status is preserved on Power OFF.

OUTPUT POWER DAMPENING:

This parameter entered as a time constant in seconds, dampens (filters) the calculated output power. Increasing the value increases the dampening effect. Dampening times longer than, say, one-twentieth to one-fiftieth of the controller's integral time may cause controller instability. This parameter is valid only for analog output models.

LEVEL 6 - PROGRAMMABLE PARAMETER (LOCKOUT MODULE)

Display	Name & Description	Range	Display condition	Default value
ID	User ID	0000 to 9999	--	0000
LOCK	Program access settings	ONL / LEVL	--	ONL

OPERATING INSTRUCTIONS

# If LOCK selection is ONL, the following parameters will be prompted.				
SET1	Lock set 1	UNLK / READ / LOCK	--	UNLK
SET2	Lock set 2	UNLK / READ / LOCK	--	UNLK
SET3	Lock set 3	UNLK / READ / LOCK	--	UNLK
TUNE	Lock tune parameter	UNLK / READ / LOCK	--	UNLK
HAND	Lock hand parameter	UNLK / READ / LOCK	--	UNLK
Pb – H	Lock proportional band	UNLK / READ / LOCK	--	UNLK
It-1	Lock integral time	UNLK / READ / LOCK	--	UNLK
Dt-1	Lock derivative time	UNLK / READ / LOCK	--	UNLK
Mnl.r	Lock Manual reset parameter	UNLK / READ / LOCK	--	UNLK
Pb - C	Lock proportional band-cool	UNLK / READ / LOCK	--	UNLK
If Lock selection is LEVL, the following parameters will be prompted.				
L – 0	Lock Level 0	UNLK / READ / LOCK	--	UNLK
L - 1	Lock Level 1	UNLK / READ / LOCK	--	UNLK
L – 2	Lock Level 2	UNLK / READ / LOCK	--	UNLK
L - 3	Lock Level 3	UNLK / READ / LOCK	--	UNLK
L – 4	Lock Level 4	UNLK / READ / LOCK	--	UNLK
NEW	Change password	ID – N / ID – Y	--	ID – N
ID	New password		NEW = ID – Y	0

NOTE:

UNLK - Full access to the particular level / parameter.

READ - Particular level / parameter can be read but not edited.

LOCK - No access to the particular level / parameter.

ONLINE DISPLAY OPTION

This function allows user to view online display options.

NOTE:

The parameters shown below are not prompted if they are locked in level 6.

DISPLAY	DESCRIPTION	DISPLAY CONDITION
SET1	Set point 1	--

OPERATING INSTRUCTIONS

SET2	Set point 2	Online access for Set 2 not valid if Auxillary output = Sensor Break / OFF.
SET3	Set point 3	Online access for Set 3 not valid if Auxillary output = Sensor Break / OFF.
TUNE	Auto tune	Online access for Auto tune is valid only if PB-Heat=0 and HC=no or PB-Cool=0.
HAND	Hand output percentage	This parameter is not prompted if Pb- H = 0
Pb – H	Proportional band – heat	
Int.t	Integral time	Integral time is not prompted if PB = 0
DEr.t	Derivative time	Derivative time is not prompted if PB = 0
MNL.r	Manual reset	Manual reset is prompted only if Integral-main=0 and PB-heat>0.
Pb-C	Proportional band – cool	This parameter is prompted only if HC = yes.
r-SP	Ramp set point	This parameter is prompted only if Ramp is ON / Hold. This parameter is read only and cannot be altered.
PERC	Output percentage	This parameter is read only and cannot be altered.
SOAK	Elapsed soak time	Note: This parameter is prompted only if Ramp is ON / Hold. This parameter is read only and cannot be altered.
°F / °C	Temperature unit	Note: This parameter is not prompted for 0-10 V / 4-20mA. This parameter is read only and cannot be altered.
AL – 1	Alarm acknowledge 1	Note: This parameter is prompted only if Alarm1 is ON and Latch is ON.


OPERATING INSTRUCTIONS

AL - 2	Alarm acknowledge 2	Note: This parameter is prompted only if Alarm2 is ON and Latch is ON.
BLNK	Blank	

USER GUIDE

AUTO TUNING:

Auto tuning is a function whereby the controller learns the process characteristics by itself and automatically sets the required P,I and D values. The auto-tuning function can be activated at any time during the process after power ON : while temperature is rising or when control has stabilized. Autotune is indicated by a decimal point flashing at the extreme right on the upper display. After the auto tuning procedures are completed, the decimal point will stop flashing and the unit will revert to PID control by using its new PID values. The PID values obtained are stored in the nonvolatile memory.

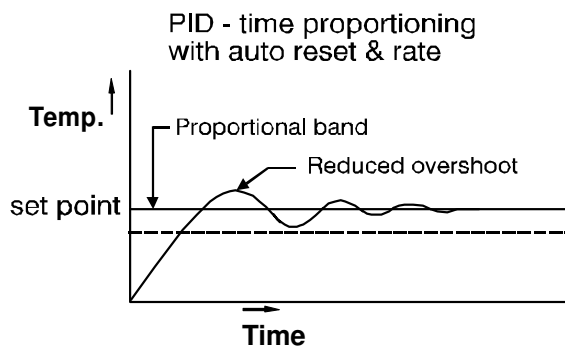

The auto-tuning is applied in cases of:

- Initial setup for a new process
- The set point is changed substantially from the previous auto-tuning value.
- The control result in unsatisfactory.

The following controller parameters are automatically adjusted by Auto- tune according to the characteristics of the process:

- Proportional Band (Pb-H)
- Integral Time (Int.t)
- Derivative Time (dEr.t)
- Input Filter (FtC)

If the control performance by using auto-tuning is still unsatisfactory, the following rules can be applied for further adjustment of PID values:

ADJUST MENT SEQUENCE	SYMPTOM	SOLUTION
(1) Proportional Band	Slow Response	Decrease PB

OPERATING INSTRUCTIONS

(PB)	High overshoot or Oscillations	Increase PB
(2) Integral Time (IT)	Slow Response	Decrease IT
	Instability or Oscillations	Increase IT
(3) Derivative Time (TD)	Slow Response or Oscillations	Decrease TD
	High Overshoot	Increase TD

MANUAL TUNING:


In certain applications (very few) using auto-tuning to tune a process may be inadequate for the control requirement, then you can try manual tuning.

Manual tuning procedure

1. Set the proportional band (ProP) to 10.0%.
2. Set the integral time (Int.t) and derivative time (dEr.t) to 0 sec.
3. Set output cycle time (CYC.t) in output parameter module to on higher than 1/10 of the process time constant (when applicable).
4. Place controller in manual control and set % power to drive the process value to the desired value. Make certain that the controller can drive the process to the setpoint. Allow the process to stabilize after setting the % power.
5. Place controller into Automatic control. If the process will not stabilize and starts to oscillate, set the proportional band 2x higher and go back to step 4.
6. If the process is stable, decrease proportional band setting by 2x and change the setpoint value a small amount to excite the process. Continue with this step until the process oscillates in a continuous nature.
7. Fix the proportional band to 3x the setting that just caused the oscillations.
8. Set the integral time to 2x the period of the oscillations.
9. Set the derivative time to 1/8 (0.125) the integral time.


PROPORTIONAL BAND:

Proportional band is the area around the set point where the controller is actually controlling the process; the output is at some level other than 100% or 0%. The band is generally centered around the set (on single output controls) causing the output to be at 50% when the setpoint and the temperature are equal.

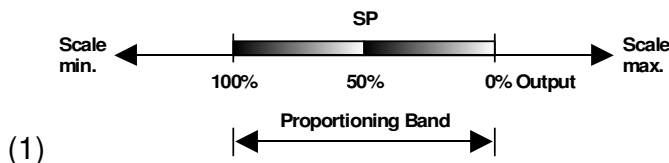

On (2) two output controls (i.e.: heat/cool) there are two proportioning bands. One is for heating and one is for cooling. In this case the bands generally end at the setpoint as shown below.

OPERATING INSTRUCTIONS

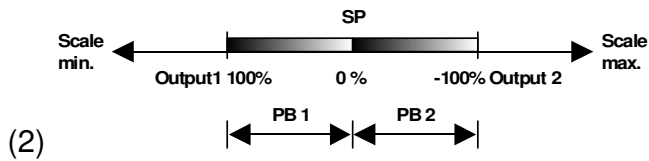

In T08, proportional band is expressed in terms of degree centigrade. If the proportioning band is too narrow an oscillation around the setpoint will result. If the proportioning band is too wide the control will respond in a sluggish manner, could take a long time to settle at set point and may not respond adequately to upsets.

MANUAL RESET:

Virtually no process requires precisely 50% output on single output controls or 0% output on two output controls. The adjustment called manual reset allows the user to redefine the output requirement at the setpoint. A proportioning control without manual or automatic reset will settle out somewhere within the proportioning band but likely not on the setpoint.

INTEGRAL TIME:

Integral time is defined as the time, in seconds, which corrects for any offset (between setpoint and process variable) automatically over time by shifting the proportioning band. Integral action (also known as “automatic reset”) changes the output power to bring the process to setpoint. Integral times that are too fast (small times) do not allow the process to respond to the new output value. This causes over-compensation and leads to an unstable process with excessive overshoot. Integral times that are too slow (large times) cause a slow response to steady state errors. Integral action may be disabled by setting the time to zero. If time is set to zero, the previous integral output power value is maintained. If integral action is disabled, manual reset is available by modifying the output power offset (“MNL.r” initially set to zero) to eliminate steady state errors. The controller has the feature to prevent integral action when operating outside the proportional band. This feature is called “antireset wind-up”.

DERIVATIVE TIME

Derivative action is used to shorten the process response time and helps to stabilize the process by providing an output based on the rate of change of the process. In effect, derivative action anticipates where the process is headed and changes the output before it actually “arrives”. The derivative time is calculated in seconds. Increasing the derivative time helps to stabilize the response, but too much derivative time coupled with noisy signal processes, may cause the output to fluctuate too greatly, yielding poor control. None or too little derivative action usually results in decreased stability with higher overshoots. No derivative action usually requires a wider proportional and slower integral times to maintain the

OPERATING INSTRUCTIONS

same degree of stability as with derivative action. Derivative action is disabled by setting the time to zero.

DERIVATIVE APPROACH CONTROL:

Derivative approach control (DAC) helps in reducing overshoot at startup. The control output cutoff point is derived as $DAC \times \text{Proportional band}$. Note that the DAC value is automatically calculated and fed after autotuning (if tuning is initiated at startup).

ANALOG OUTPUT-RETRANSMISSION:

1. The analog retransmission output feature allows the retransmission of the control output to an external device.
 2. The output is scaled by use of Analog low and high scaling points in level 2 of the programming menu. The analog output will be proportional to PV (derived from Analog Low and High scaling.)
 3. A-LO : Displays the value that corresponds to 0V, 0/4mA as selected.
A-HI : Displays the value that corresponds to 10V or 20mA as selected.
3. Note that the main output selection in level 4 has to be relay 2.

AUTO-TUNE OF HEAT/COOL SYSTEMS:

During Autotune of heat/cool systems, the controller switches the cooling output (O2) ON and OFF in addition to the heat output (O1). The heat/cool overlap deadband parameter (db in Level 2) determines the amount of overlap or deadband between the two outputs during Autotune.

For most applications, set this parameter to 0.0 prior to starting Autotune. After the completion of Autotune, this parameter may need to be reset. It is important that external load disturbances be minimized, and if present, other zone controllers idled as these may have an effect on the PID constant determination. Some water cooled processes exhibit an extreme non-linear gain characteristic. That is, the process cooling gain starts very high and flattens out deeper into the cooling region. This effect may result in regular oscillations at setpoint as the controller applies heat to counteract the effect. These processes may benefit from a lower cooling fan setting and/or reduced water flow in the jacket or manifold. The process heat and cool gains should be balanced as much as possible, and the controller gains adjusted to the process.

ALARM MODES:

1. Absolute alarms (Independent Alarm) :
Absolute alarm is a self-existent alarm independent of the main set point. For eg. If the main set point is 100OC and absolute alarm is set as 110OC, the alarm will be activated at 110OC.
There are two absolute alarms in T08 -

OPERATING INSTRUCTIONS

Full scale High Alarm: sets off alarm signal when temperature rises above set point to a pre-set temperature above scale minimum. Refer Fig: d.

Full scale Low Alarm: sets off alarm signal when temperature falls below setpoint to a pre-set temperature above scale minimum. Refer Fig: e.

2. Deviation alarms (Error alarm):

This alarm is activated at an error on the main set point. For eg. If the main set point is 100OC and deviation alarm is set to +5 OC then the alarm will be activated at 100+5=105 OC. Incase of deviation band alarm the alarm will be activated on both sides of set point i.e. At 95 and 105.

There are three deviation alarms in T08 -


Deviation High Alarm: sets off alarm signal when temperature rises above a pre-set temperature above the set point. Refer Fig: a.

Deviation Low Alarm: sets off alarm signal when temperature falls below a pre-set temperature below the set point. Refer Fig: b.

Deviation Band Alarm: sets off alarm signal when temperature rises above or falls below a pre-set temperature above or below the set point. Refer Fig: c.

3. BREAK ALARM:

Break Alarm: sets off alarm signal when sensor break / under range occurs.

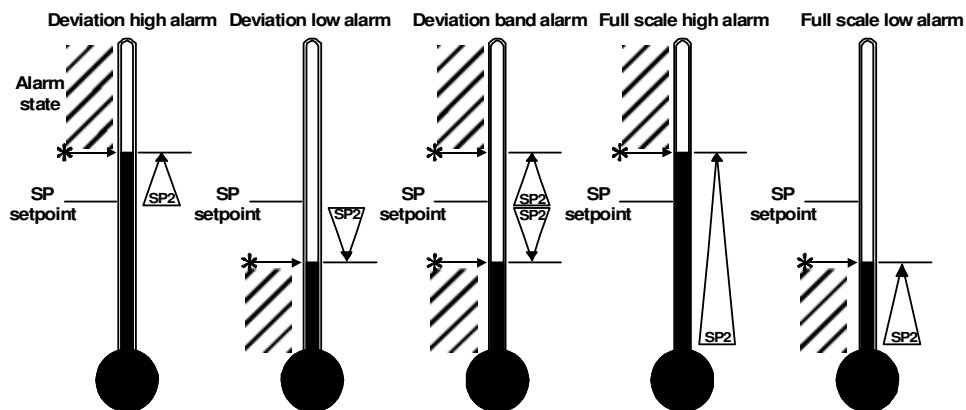

Zone PID:

There are 4 control Zones each having a set point and associated P, I and D values which can be programmed as per the process requirements. A control Zone is selected automatically and implemented as per the set value programmed, to accommodate changing process requirements. The corresponding P, I,D values will be used to control the process. The main advantage of Zone PID is in processes where the requirement of frequent tuning, due to changes in setpoint, can be eliminated through programming of appropriate Zones. Consider a case where the process needs to be controlled at two different set points: 1000 C and 4000 C.

OPERATING INSTRUCTIONS

The Zone set points may be programmed as:

1. Zone setpoint 1 (Level1) : 1500 C (This implies that for set1 < Zone SP 1, Zone1 PID

values will be considered.)

2. Zone setpoint 2 (Level1) : 4500 C (This implies that for set1 <Zone SP 2, Zone2 PID

values will be considered.)

The P, I, D values for the respective Zones can be manually fed or can be tuned automatically.

How to tune the Zones

- Only Zone set points 1, 2, 3, 4 need to be programmed.
- Zone setpoint is not the tuning setpoint.

To tune, say, Zone 1 program the following:

1. Set1 (Online) = 1000 C (for eg.) (Zone 1 : 0 - 1500 C)

(Note: • Set1 < Zone setpoint 1.

• The PID settings derived after tuning are stored in Zone 1.

• After tuning, for 0 < Set1 < 1500 C, PID settings of Zone 1 are

applicable.)

2. Tune = ON (in Level 1 or Online)

3. After tuning the controller is automatically loaded with the new PID values.

Now to tune the next Zone, Zone 2, program the following:

1. Set 1 (Online) = 4000 C (Zone 2 :1500 - 4500 C)

(Note: • Zone Setpoint 1 < Set 1 < Zone setpoint 2.

• The PID settings derived after tuning are stored in Zone 2.

• After tuning, for 1500 < Set1 < 4500 C, PID settings of Zone 2 are

applicable.)

Similarly, the four different Zones can be programmed.